Quick installation user manual

360Eye S User Manuals

(Android & iphone)

As Wechat restrctions , please use other QR code scaning tools or browsers to scan

Dear user , thanks for buying our product, please read the manual carefully and keep it for future reference

Structure image

Press the reset button for 3 seconds. When you hear the voice of “Didi”, reset successfully.

1

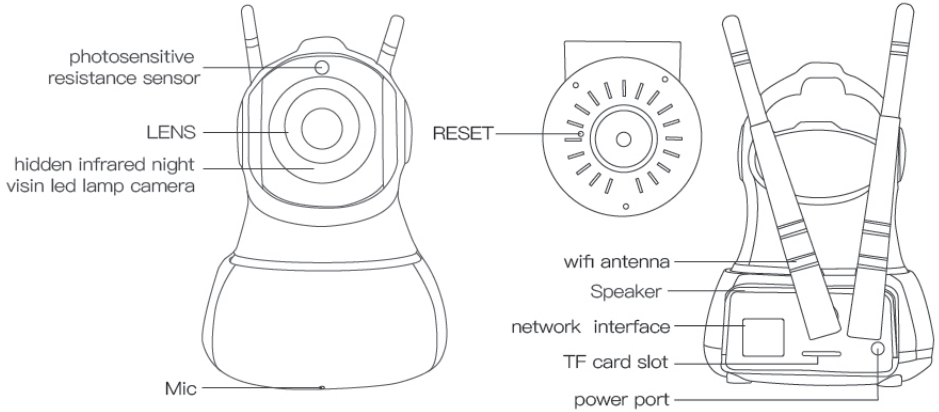
photosensitive resistance sensor
LENS
hidden infrared night visin led lamp camera
Mic
RESET
wifi antenna
Speaker
network interface
TF card slot
power port

2

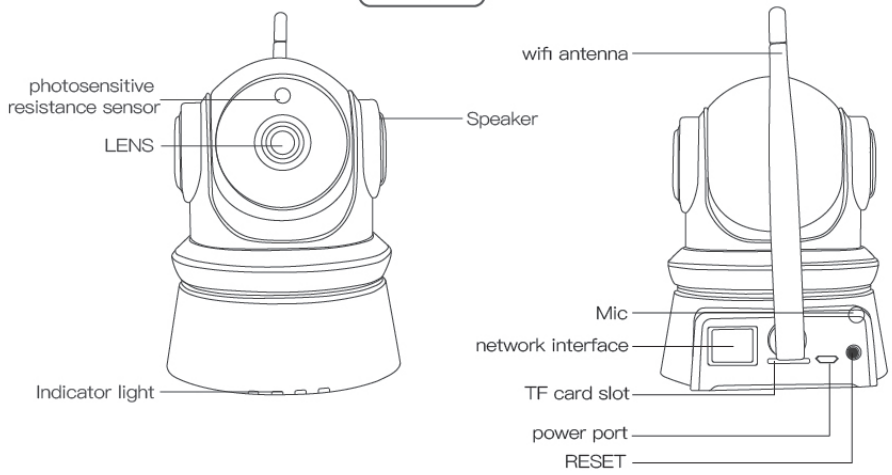
photosensitive resistance sensor
LENS
Indicator light
Speaker
wifi antenna
Mic
network interface
TF card slot
power port
RESET

3

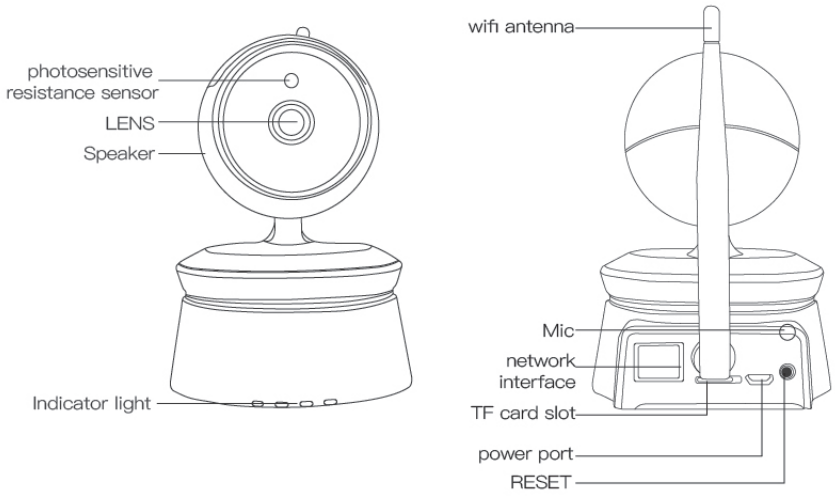
photosensitive resistance sensor
LENS
Speaker
Indicator light
wifi antenna
Mic
network interface
TF card slot
power port
RESET

4

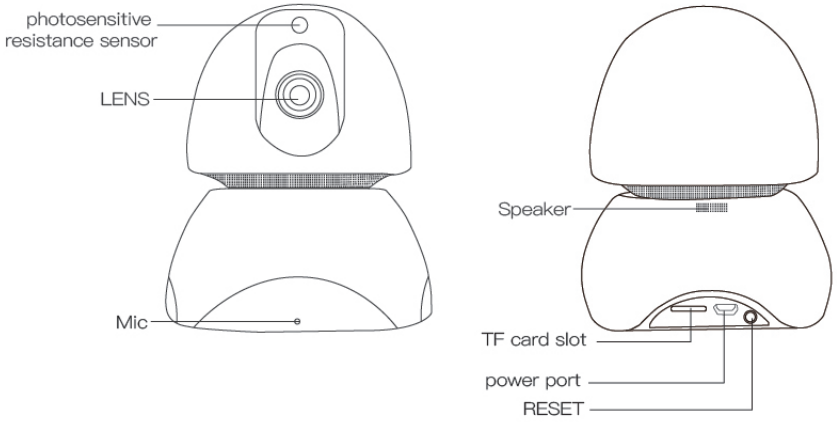
photosensitive resistance sensor
LENS
Mic
Speaker
TF card slot
power port
RESET

1. Download &Install

To make sure you download the latest version, you need:

1. Search the name “360Eyes”in the APP Store、Google play and download the app in your mobile phone.

2. Or scan the QR code of the app, you can find it on the package box or /in this manuals.

Please note：360Eyes app only supports Android 4.0, IOS 9.2 and above.

2. Register Account

Register account——Use your phone number or Email to do registration and Login.

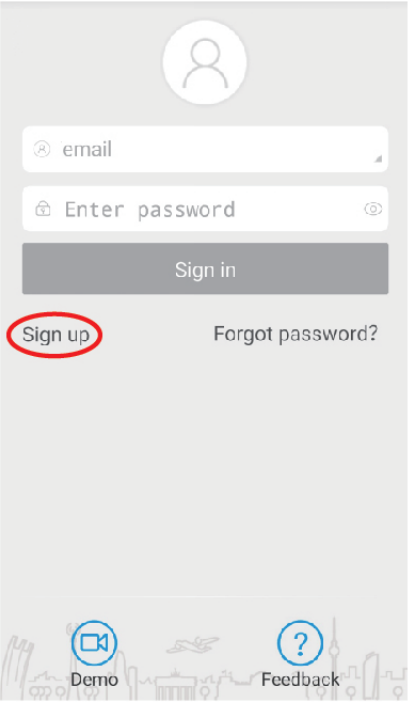
email
Enter password
Sign in
Sign up
Forgot password?
Demo
Feedback

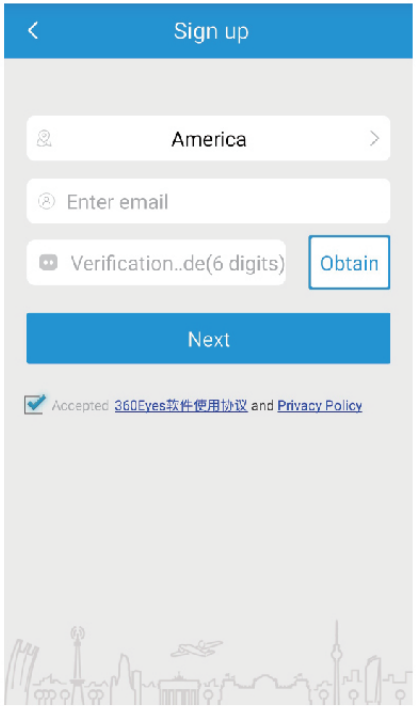
Sign up
America
Enter email
Verification..de(6 digits)
Obtain
Next
Accepted 360Eyes软件使用协议 and Privacy Policy

Please note:

(1) Choose your Located country, enter true and effective Email address, after your Email will get a verification code.

(2) Enter verification code and click next step, then setup your password.

3. Device Connection

After registered please login the app, add device by below pictures.

Smart wireless mode(recommended): Add camera via wifi and sound.

1. When the camera indicator blinking red, the camera is ready to be connected; If not, please press “Reset” button shortly for 2 seconds.

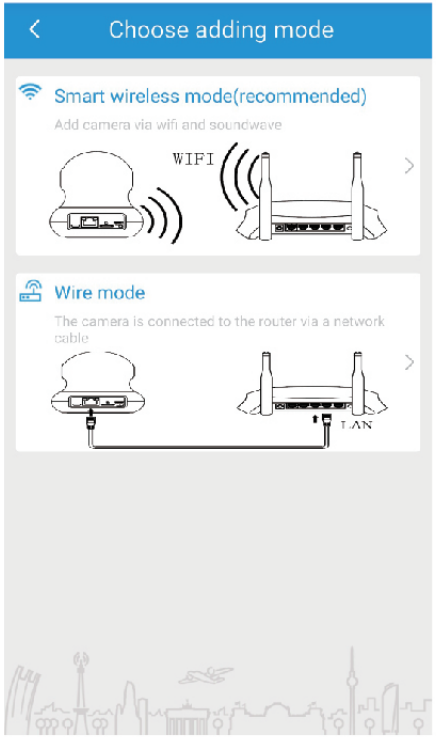
Choose adding mode
Smart wireless mode(recommended)
Add camera via wifi and soundwave
WIFI
Wire mode
The camera is connected to the router via a network cable
LAN

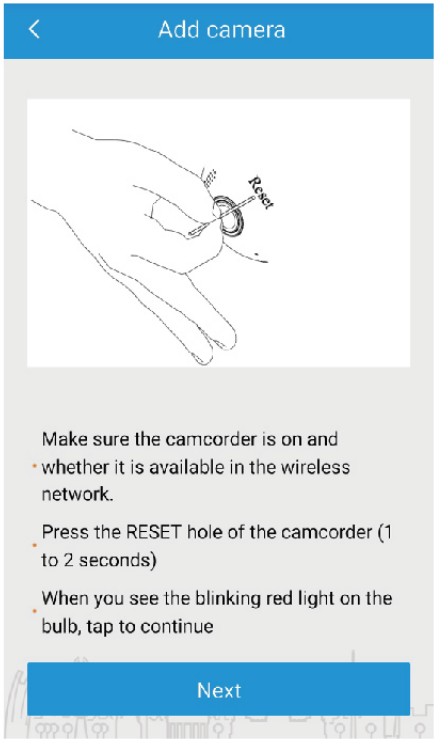
Add camera
Reset

- Make sure the camcorder is on and whether it is available in the wireless network.
- Press the RESET hole of the camcorder (1 to 2 seconds)
- When you see the blinking red light on the bulb, tap to continue

Next

2. When the camera’s indicator blinking red and hear sound “didi”, click “+” on the up right, then enter right wifi and password. The right–hand magnifying glass can be used to switch the phone network.

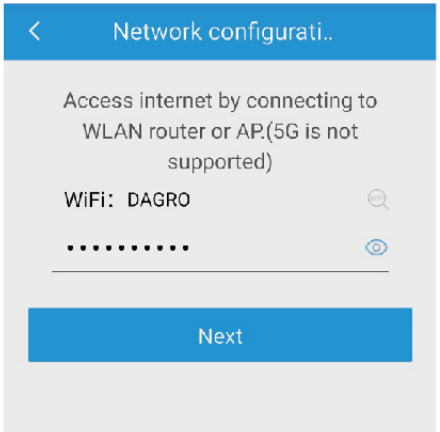
Network configurati..

Access internet by connecting to WLAN router or AP.(5G is not supported)

WiFi: DAGRO

••••••••••

Next

Please note: our wifi camera can only support WiFi under 5G; The WiFi name and password can only be included with letters from a to z and numbers from 0–9.

3. Choose your current located country, normally the phone can figure out the country; if cannot, please manually find the right place. After that please quit the app and login again.

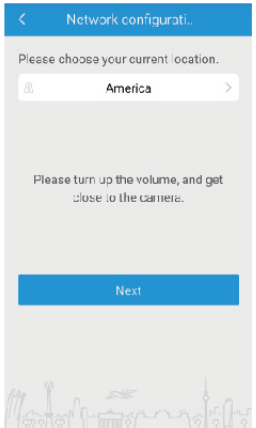
Network configurati..

Please choose your current location.

America

Please turn up the volume, and get close to the camera.

Next

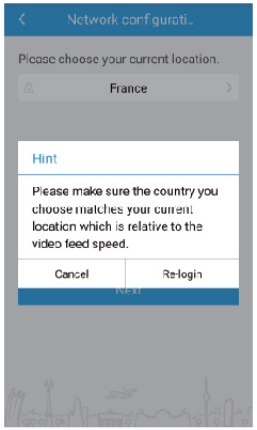
Network configurati..

Please choose your current location.

France

Hint

Please make sure the country you choose matches your current location which is relative to the video feed speed.

Cancel
Re-login
Next

4. During connecting to wifi, please turn up the volume, and get close to the camera. When the camera shows "ding dong" sound, and the indicator turns to green,camera connects to wifi successfully.

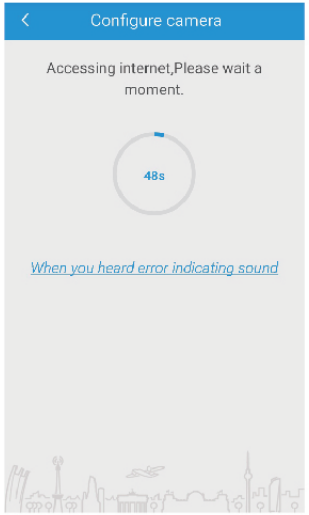
Configure camera
48s
When you heard error indicating sound

Accessing internet,Please wait a moment.

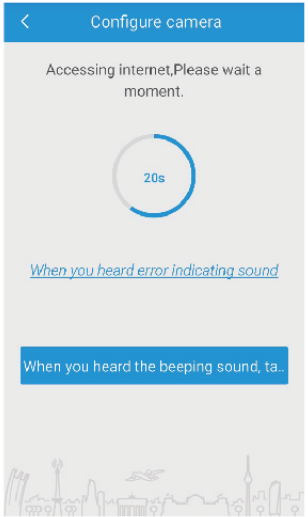
Configure camera
20s
When you heard error indicating sound
When you heard the beeping sound, ta..

Accessing internet,Please wait a moment.

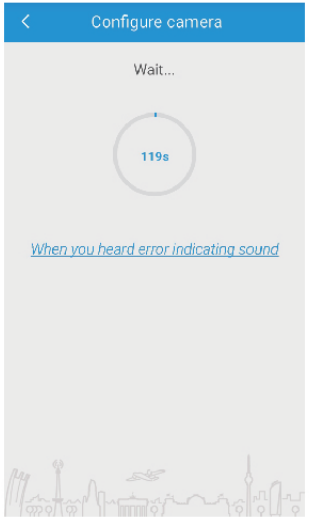
Configure camera
119s
When you heard error indicating sound

Wait...

5. Name your camera not support special characters(like @)

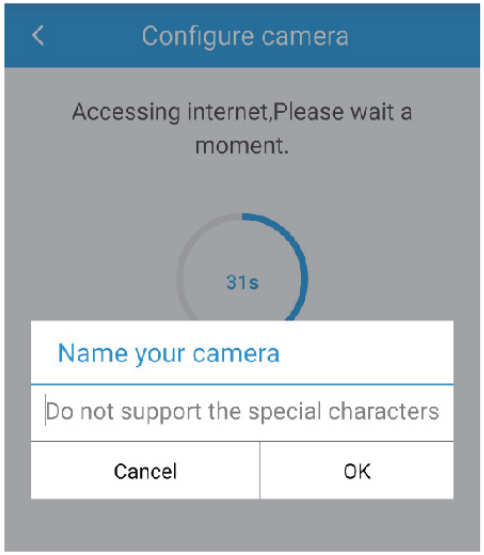
Configure camera
31s
Name your camera
Cancel
OK

Accessing internet,Please wait a moment.

Do not support the special characters

Wire mode

(This function only be available for devices with network ports.)

1.Press "+" on the up right and choose wire mode.

2.Connect the camera to the router via a network cable.

3.Make sure the device and the phone are connected to the same router.

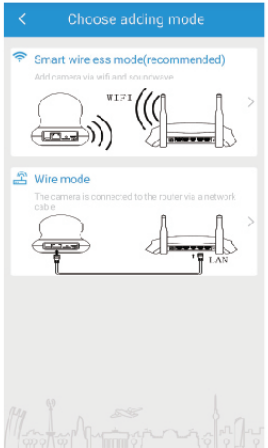
Choose adding mode
Smart wireless mode(recommended)
WIFI
Wire mode
LAN

Add camera via wifi and soundwave

The camera is connected to the router via a network cable

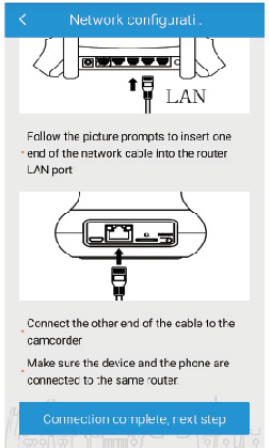
Network configurati..
LAN
Connection complete, next step

- Follow the picture prompts to insert one end of the network cable into the router LAN port
- Connect the other end of the cable to the camcorder
- Make sure the device and the phone are connected to the same router

4.Click next step and start searching for device Mac address. Click the Mac. When the device shows sound "ding dong" and indicator turns green, add device successfully.

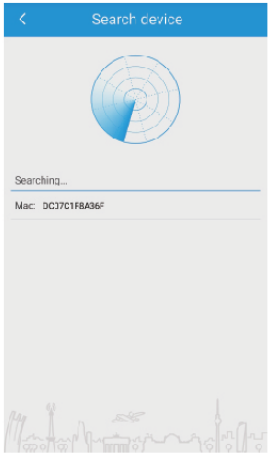
Search device

Searching...

Mac: DC07C1F8A36F

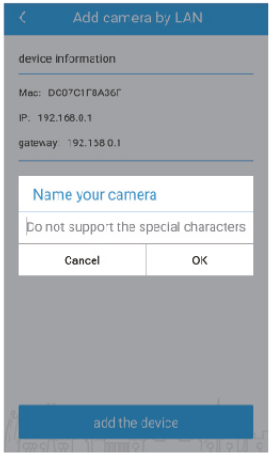
Add camera by LAN
Name your camera
Cancel
OK
add the device

device information

Mac: DC07C1F8A36F

IP: 192.168.0.1

gateway: 192.158.0.1

Do not support the special characters

(Please note: This function only supports Android App 3.0.10.32, IOS App 2.1.0 and above.

5. Repeatedly click 5 times in the blank part of the Login page, then it will show “Local Watch”, then starts viewing video; If you want to quit the video, please click 5 times again.

4. Forget your password

If you forget your app password, please click “Forget password?” option. Choose the same country when you registered your account, enter account name, your will get a verification code, fill in the code and setup your new password.

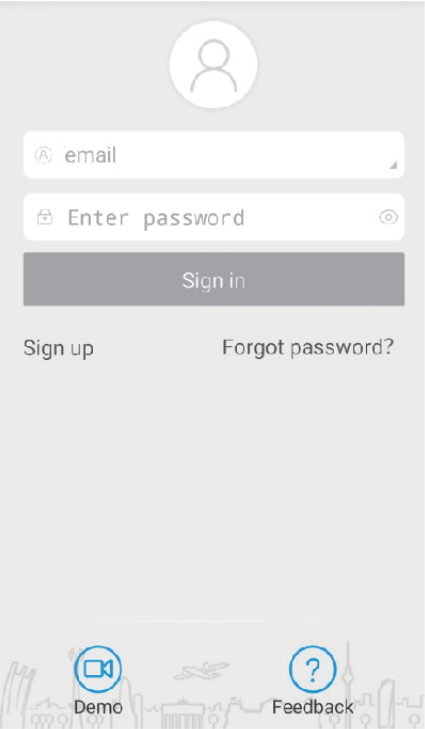
email
Enter password
Sign in
Sign up
Forgot password?
Demo
Feedback

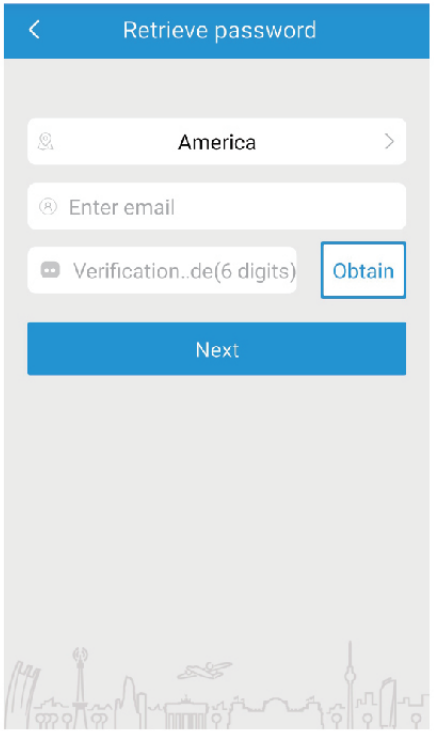
Retrieve password
America
Enter email
Verification..de(6 digits)
Obtain
Next

5. Live Preview

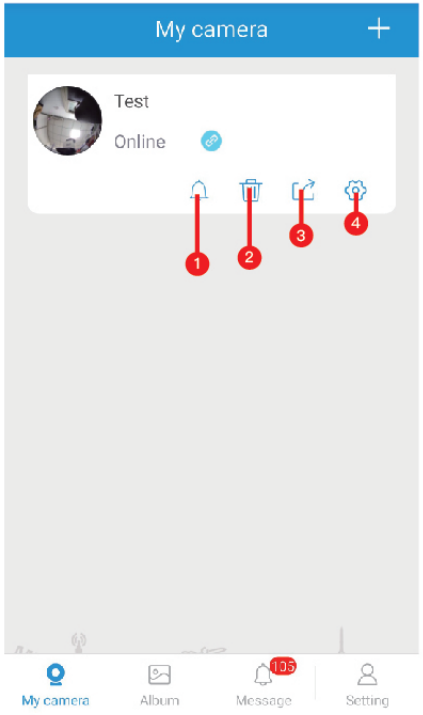
My camera
Test
Online
1
2
3
4
105
My camera
Album
Message
Setting

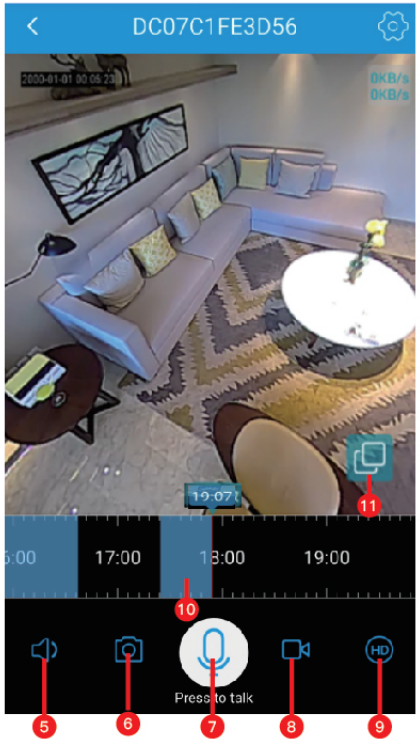
DC07C1FE3D56
11
17:00
18:00
19:00
10
HD
Press to talk
5
6
7
8
9

①Close and open alert(TF/SD card needed)

②Delete the camera

③Share the camera to others account (at most 5 accounts)

④Camera setting

⑤Stop/Start voice recording

⑥Catch snapshot

⑦Press to talk

⑧Stop/Start local video

⑨Switch Screen resolution

⑩Click to review playback video (TF/SD card needed)

⑪Click to switch the screen mode（When the camera is in upward and top view)

Please note：recommend to use C10 high speed certificated card，format the card in your computer first; To protect information security, if you take the card out from the camera, and read on your computer, it will remind that the card need to be formatted.

6. Camera settings

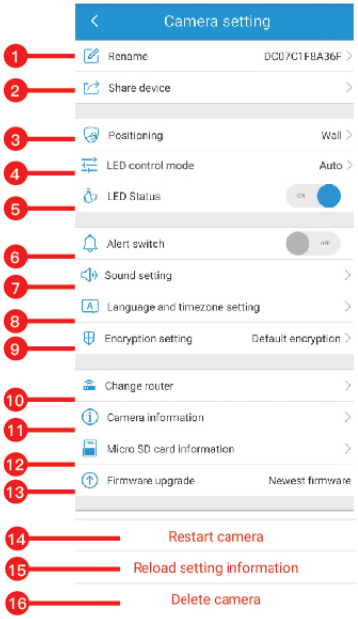

Rename DC07C1FBA36F

Positioning Wall

LED control mode Auto

LED Status ON

Alert switch OFF

Encryption setting Default encryption

Firmware upgrade Newest firmware

Camera setting
Share device
Sound setting
Language and timezone setting
Change router
Camera information
Micro SD card information
Restart camera
Reload setting information
Delete camera
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16

①Rename the camera

②Share camera’s video to other users（at most 5 users)

③Switch the view angle（wall/Top/upward view)

④LED control mode（Auto/Manual, only apply for LED light bulb).

⑤Close/Open indicator.

⑥Close/Open Alert function (SD Card needed).

⑦Open/Close video and connect indicating sound, and also adjust volume.

⑧Camera indicating language and located timezone setting

⑨Video Encryption(device support required ）：

a.”Default encryption”: use system default password to do encryption, when preview video and check alerting message on mobile client, user doesn’t need to enter verified password. Other users can only see screen mess if they don’t know the password.

b.“Custom encryption”：customize your password，please enter password when preview video and check alerting messages，other users only see screen mess if they don’t know password.

⑩Router switch

⑪Device information (Note：WiFi intensity is from 1 to 5, 4 or 5 is best)

⑫Micro SD Card information

⑬Firmware upgrade to make sure its Newest firmware

⑭Restart camera

⑮Reload setting information

⑯Delete camera

7. Alb7um

Check/Edit saved snapshot and local video

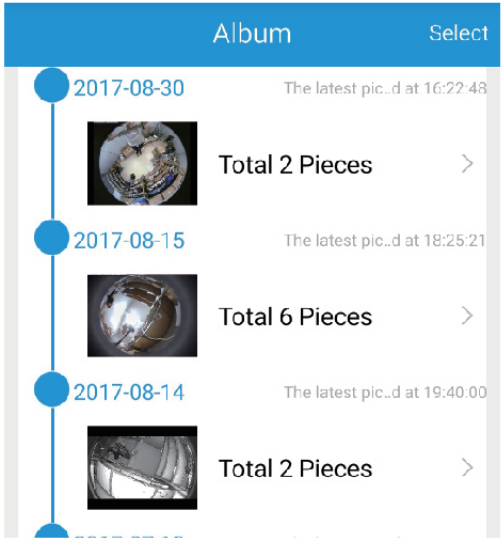

Album
Select

2017-08-30 The latest pic..d at 16:22:48

Total 2 Pieces

2017-08-15 The latest pic..d at 18:25:21

Total 6 Pieces

2017-08-14 The latest pic..d at 19:40:00

Total 2 Pieces

8. Alert Message

Setting/Edit/Check alert messages.

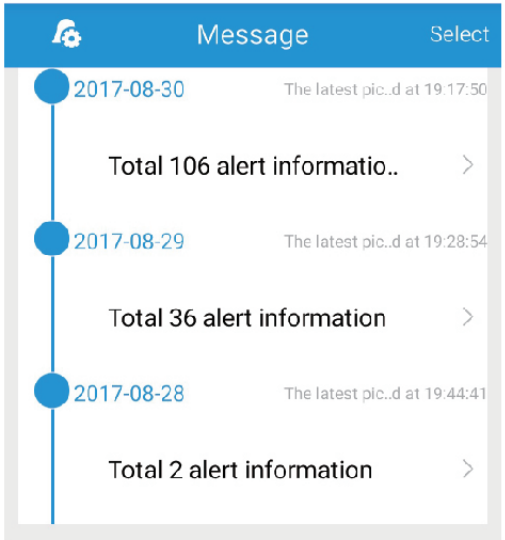

Message
Select

2017-08-30 The latest pic..d at 19:17:50

Total 106 alert informatio..

2017-08-29 The latest pic..d at 19:28:54

Total 36 alert information

2017-08-28 The latest pic..d at 19:44:41

Total 2 alert information

9. Setting

①Message setting

②Feedback

③Help

④About

⑤Change password

⑥Sign out

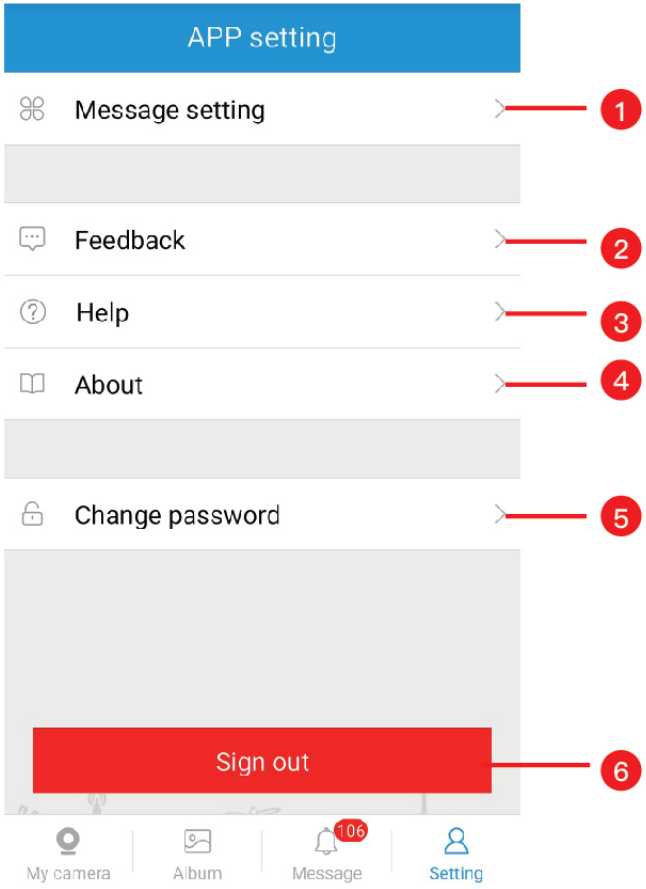

APP setting
Message setting
1
Feedback
2
Help
3
About
4
Change password
5
Sign out
6
My camera
Album
106
Message
Setting

10. Panoramic Stitching pictures

When you add ptz camera to the app, you will find ptz camera has a button 360 , click it to enter general navigation, choose “Try it out”, and the camera will start stitching pictures, by turning 15 different view angle (360 degrees total) to catch 15 different pictures.

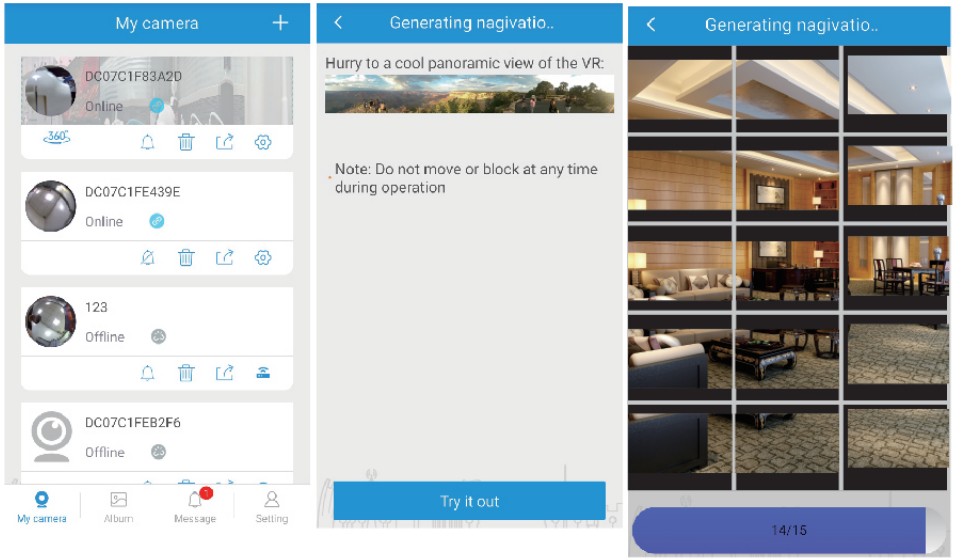
My camera
+
DC07C1F83A2D
Online
360
DC07C1FE439E
Online
123
Offline
DC07C1FEB2F6
Offline
My camera
Album
Message
Setting
Generating nagivatio..
Try it out
Generating nagivatio..
14/15

Hurry to a cool panoramic view of the VR:

Note: Do not move or block at any time during operation

After catching pictures done,15 pictures will be stitched into one general navigation for panoramic view:

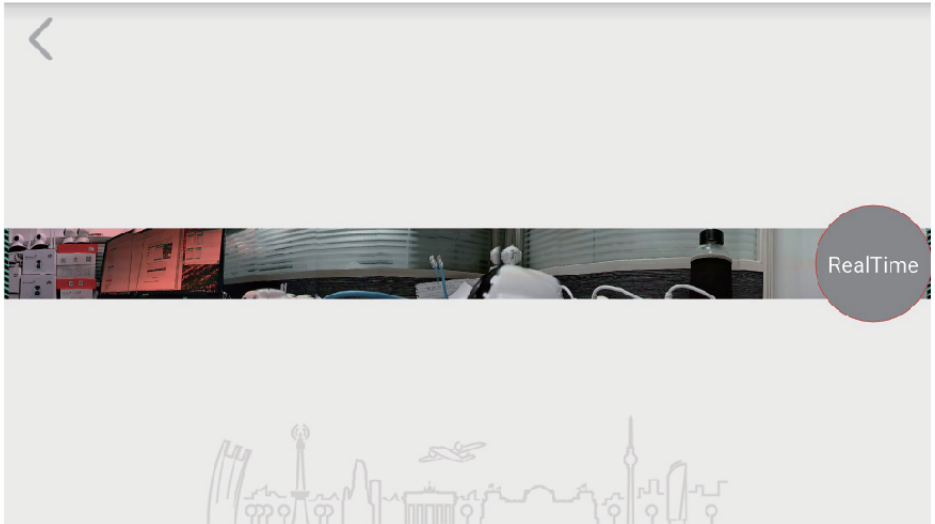

Panoramic view

Click “Real/Time” to enter video play page

Video play mode has three options, normal play、panoramic view and Dynamic thumbnail. You can click on the panoramic view to see anywhere you want(cause camera lens can align to anywhere your click); You can also control the direction of the shaking head lens by manually dragging the playback screen.

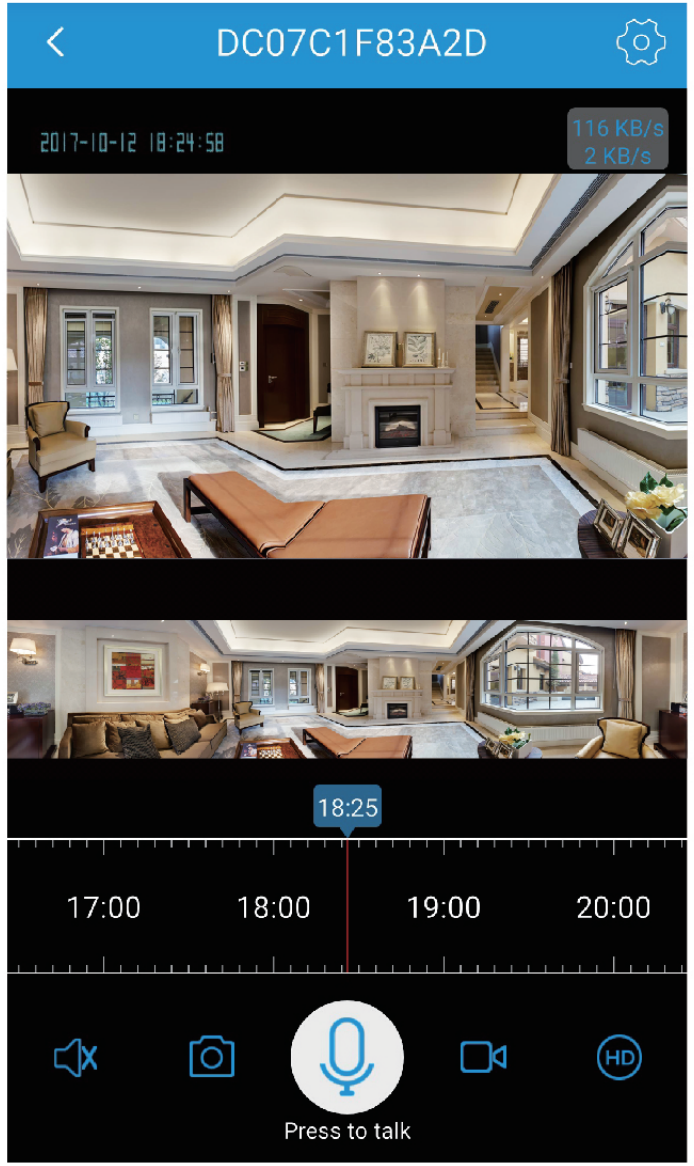
DC07C1F83A2D
2017-10-12 18:24:58
116 KB/s
2 KB/s
18:25
17:00
18:00
19:00
20:00
HD
Press to talk

Rotation camera's horizontal screen effect.

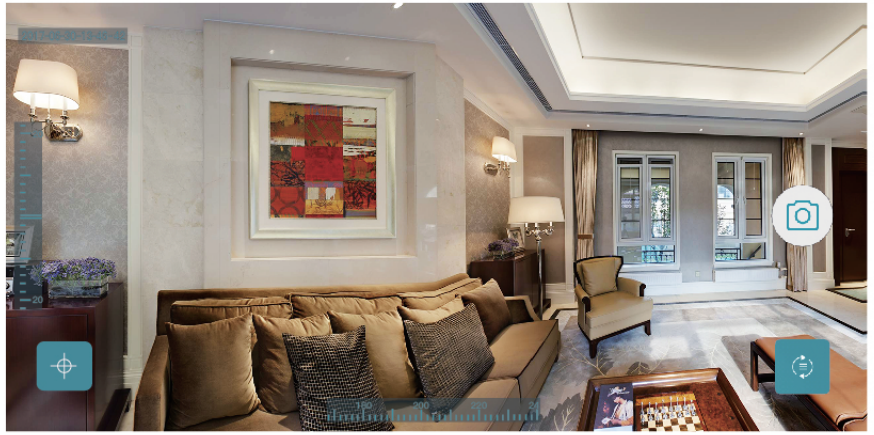

Click ◎ to change to panoramic view in the station of horizontal screen

Of course you can also do not choose stitching panoramic view after adding pictures; Enter video play directly, you will only see one video screen.

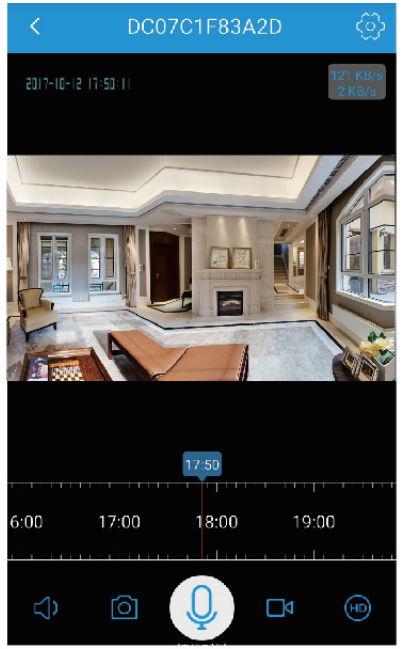
DC07C1F83A2D
17:50
6:00
17:00
18:00
19:00
HD